

LUCENT[®]

Installation and Operating Instructions

Warranty

Whilst every Lucent product is manufactured to the highest quality standards, we offer a comprehensive Warranty for complete peace of mind.

Residential Use		Commercial Use	
20 Years	Replacement cartridge	15 Years	Replacement cartridge
10 Years	Replacement products or parts	7 Years	Replacement products or parts
2 Year	Labour	1 Year	Labour

Warranty may become void due to any of the following:

- Inability to provide proof of purchase or equivalent documentation
- Product not installed by a licensed Plumber
- Failure to install product to national standards and state regulations
- Failure to install product in accordance with manufacturers installation instructions
- Pressure and Temperature Requirements:
 - Hydro Static inlet pressure range: 150 to 500kPa
 - Maximum hot water temperature 75 degree celsius
 - Recommended operating temperatures: 1 to 75 degrees celsius
- Fitting of non-approved flow controllers in tap bodies or outlets
- If products are used for outdoor applications.
- Product used for non-potable water applications.
- Damage because of insufficient flushing of lines prior to installation. Service, repairs, or installation of non-Lucent replacement parts undertaken without Lucent's prior written approval.
- Damage to finishes caused by non adherence to cleaning instructions.

Cleaning Instructions:



CLEAN MICROFIBRE CLOTH



SOAPY WATER



PH BALANCE SOAP - BASED CLEANSER

WARRANTY SERVICE


For all warranty service calls, please contact your local store.

Phone: 1300 474 714

E-mail: warranty@lucentdesigns.com.au



INS_1016.pdf rev.1.0

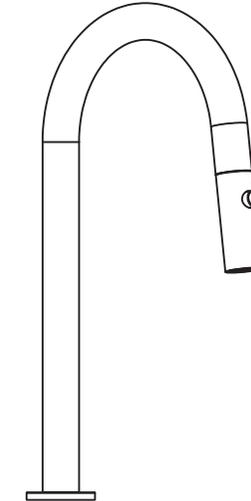

93314 Legerro Pull Out Spray Sink 200mm Curve Spout Lead Free



Thank you for purchasing a quality Lucent product. Please note that this product must be installed by a qualified and registered plumber who is compliant with all the relevant regional requirements and who holds current certification.

Note: Please read all instructions prior to installation to limit warranty disputes should a claim arise.

Water Supply Requirements



recommended working pressure
350KPa



maximum hot water temperature
75 degrees

Pressure

- Recommended Minimum Hydrostatic Pressure: 150 to 500 kPa
- This pressure may be exceeded only under test conditions.
- Where hydrostatic pressure exceeds 500kPa, pressure limiting valve must be installed as per AS/NZS 3500

Temperature

- Water Temperature Range: 1°C to 75°C

Suitable Hot water Units

- Storage Tank: Yes
- Continuous Flow: Yes



WATER RATING
www.waterrating.gov.au

4.5 liters per minute


In accordance with AS/NZS 6400
Licence No. 0049
Australia

Installation Instructions

Note to Plumber: Please provide this leaflet to the owner after installation.


STEP 1

Insert the spout assembly into the sink or benchtop until it seats.

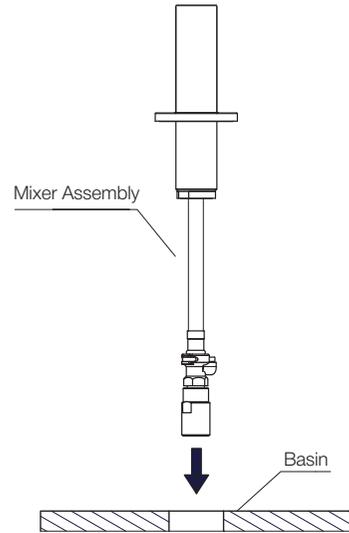

STEP 2


Ensure the stainless steel washer is in place, tighten the backing nut until the spout is firmly mounted.

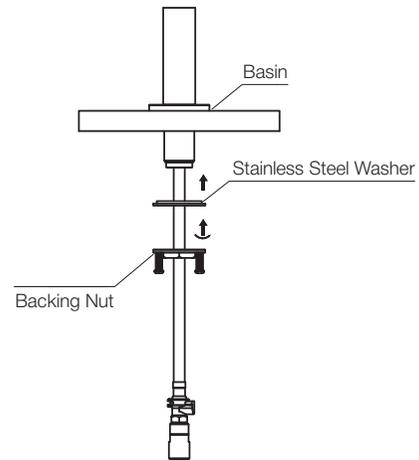

2


STEP 3

Firmly tighten the locking screws.

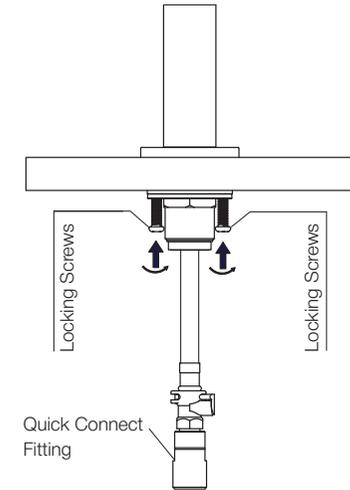

STEP 4

Connect the flexible nylon hose to female quick connector. Attach the pullout hose weight in a vertical plane just above the loop.

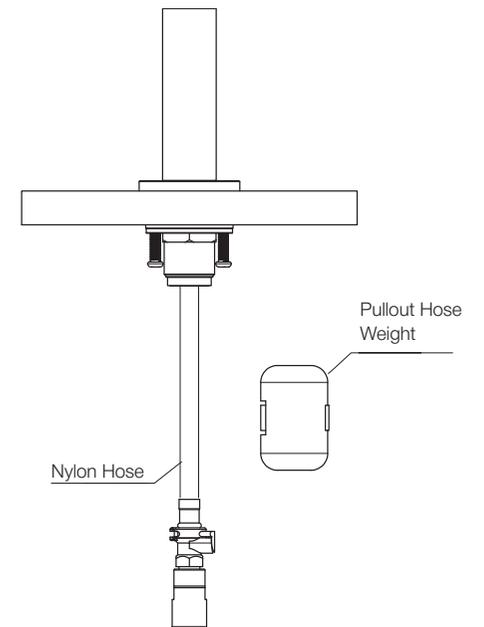

3